

Clavinova. CLP-725 Quick Operation Guide

While holding down the applicable button, press one of the highlighted keys shown below to select a Demo Song or set a parameter.

1 Song playback

Quick Play **Demo Songs** **50 Preset Songs (50 Classical Music Masterpieces) Song number** **Song Data Loaded from the Computer**

A#-1	C#0	D#0	F#0	G#0	A#0	C#1	D#1	F#1	G#1	A#1	C#2	D#2	F#2	G#2	A#2	C#3	D#3	F#3	G#3	A#3	C#4	D#4	F#4	G#4	A#4	C#5	D#5	F#5	G#5	A#5	C#6	D#6	F#6	G#6	A#6																																								
Off	On					CFX Grand	Bösendorfer	Pop Grand	Stage E.Piano	DX E.Piano	Harpischord	Pipe Organ	Vibraphone	Jazz Organ	Strings	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	1st Song	2nd Song	3rd Song	4th Song	5th Song	6th Song	7th Song	8th Song	9th Song	10th Song
A-1	B-1	C0	D0	E0	F0	G0	A0	B0	C1	D1	E1	F1	G1	A1	B1	C2	D2	E2	F2	G2	A2	B2	C3	D3	E3	F3	G3	A3	B3	C4	D4	E4	F4	G4	A4	B4	C5	D5	E5	F5	G5	A5	B5	C6	D6	E6	F6	G6	A6	B6	C7																								

* 50 Preset Songs (50 Classical Music Masterpieces) Song number / Song name

1 Canon D dur	11 Salut d'amour op.12	21 Prelude (Wohltemperierte Klavier I No.1)	31 Etude op.10-3 "Chanson de l'adieu"	41 Humoresque
2 Air On the G String	12 From the New World	22 Menuett G dur BWV Anh.114	32 Etude op.10-12 "Revolutionary"	42 Arietta
3 Jesus, Joy of Man's Desiring	13 Sicilienne	23 Piano Sonata No.15 K.545 1st mov.	33 Valse op.64-1 "Petit chien"	43 Tango (España)
4 Twinkle, Twinkle, Little Star	14 Clair de lune	24 Turkish March	34 Nocturne op.9-2	44 The Entertainer
5 Piano Sonata op.31-2 "Tempest" 3rd mov.	15 Jupiter (The Planets)	25 Piano Sonata op.13 "Pathétique" 2nd mov.	35 Nocturne KK4a-16/BI 49 [Posth.]	45 Maple Leaf Rag
6 Ode to Joy	16 Menuett (Eine kleine Nachtmusik K.525)	26 Für Elise	36 Träumerei	46 La Fille aux Cheveux de Lin
7 Wiegenlied op.98-2	17 Menuett G dur	27 Piano Sonata op.27-2 "Mondschein" 1st mov.	37 Barcarolle	47 Arabesque No.1
8 Grande Valse Brillante	18 Marcia alla Turca	28 Impromptu op.90-2	38 La prière d'une Vierge	48 Cakewalk
9 Polonaise op.53 "Héroïque"	19 Piano Concerto No.1 op.11 2nd mov.	29 Frühlingslied op.62-6	39 Liebesträume No.3	49 Je te veux
10 La Campanella	20 The Nutcracker Medley	30 Fantaisie-Impromptu	40 Blumenlied	50 Gymnopédies No.1

2 Voice settings

Voices **Reverb Types** **Reverb Depth** **VRM** **Binaural Sampling/ Stereophonic Optimizer** **Grand Expression Modeling** **Duo type** **Volume Balance (Dual/Duo mode)** **Octave Shift (Dual/Duo mode)** **Touch Sensitivity**

A#-1	C#0	D#0	F#0	G#0	A#0	C#1	D#1	F#1	G#1	A#1	C#2	D#2	F#2	G#2	A#2	C#3	D#3	F#3	G#3	A#3	C#4	D#4	F#4	G#4	A#4	C#5	D#5	F#5	G#5	A#5	C#6	D#6	F#6	G#6	A#6																
						CFX Grand	Bösendorfer	Pop Grand	Stage E.Piano	DX E.Piano	Harpischord	Pipe Organ	Vibraphone	Jazz Organ	Strings	Recital Hall	Concert Hall	Chamber	Club	Off	1 step down	Default setting	1 step up	Off	On	Static	Dynamic	Separated	Balanced	1 step down	1 step up	-1 (Voice 2)	+1 (Voice 2)	-1 (Voice 1)	+1 (Voice 1)	Soft	Hard	Medium	Fixed												
A-1	B-1	C0	D0	E0	F0	G0	A0	B0	C1	D1	E1	F1	G1	A1	B1	C2	D2	E2	F2	G2	A2	B2	C3	D3	E3	F3	G3	A3	B3	C4	D4	E4	F4	G4	A4	B4	C5	D5	E5	F5	G5	A5	B5	C6	D6	E6	F6	G6	A6	B6	C7

Clavinova. CLP-725 Quick Operation Guide

3 Metronome settings

Voice confirmation of current Tempo value
A#-1 C#0 D#0 F#0 G#0 A#0

Metronome Volume
Default volume
1 step down
1 step up

Tempo (Metronome, Songs, etc.)
C#1 D#1 F#1 G#1 A#1 C#2 D#2
1 2 3 4 5 6 7 8 9 0
10 steps down
10 steps up

Metronome Beat
C#3 D#3 F#3 G#3 A#3 C#4 D#4 F#4 G#4 A#4
0 2 3 4 5 6

To increase the value by 1:
METRONOME + + [R]

To decrease the value by 1:
METRONOME + - [L]

4 Other settings

Operation Confirmation Sounds
On
Off

Auto Power Off
Enable
Disable

Tuning
440.0 Hz
442.0 Hz

IAC Depth
On
Off
1 step down
1 step up

Transpose
Default setting
-6 -4 -2
0 (normal pitch)
+1 +3 +5 +6

MIDI Transmit Channel
Ch 1
1 step down
1 step up

MIDI Receive Channel
Ch 1
Ch 1+2
ALL
1 step down
1 step up

Program Change
On/Off
On/Off

Audio Loopback
On
Off

Speaker On/Off
On
Off
Normal

Song Playback Channel
Ch 1+2
ALL
Ch 1+2

5 Tuning settings

While holding down the [DEMO/SONG] and [PIANO/VOICE] buttons, press the [+R], [-L] or both buttons as shown below to fine-tune the pitch of your instrument.

To tune up (in about 0.2 Hz steps):

To tune down (in about 0.2 Hz steps):

Default pitch: 440.0 Hz

6 Duo setting

While holding down the [PIANO/VOICE] button, simultaneously press the [+R] and [-L] buttons to turn Duo on or off.

To turn Duo on or off: